

LEAKY SEALS

One of the oils in XM-5 Oil Stabilizer is just for putting oil back into seals and o-rings. XM-5 starts to work immediately putting oil back into seals and o-rings that have shrunk because of oil loss, to bring them back to size. If they do not come back to size that means they are worn. In 3 to 4 days you will notice the leak has stopped or is greatly reduced. When seals and o-rings shrink they cause oil leakage and blowby. In automatic transmissions this causes slow or no shifting. In hydraulics it causes loss of hydraulic pressure(can't lift as much). By using XM-5 in your oil your seals and o-rings will come back to size just by replacing the oil that has been extracted.